



Classe 300

User manual

bticino



Contents

Your Classe 300 Video Internal Unit, use it now!	4
Answer a call	4
Listen to the answering machine (only models 344622)	6
Auto-switching on and camera scrolling	9
Write or record a memo	11
Call another room or apartment (Intercom)	15
General information	17
Function keys and status LEDs	17
Home page	18
Enabling functions	18
Quick actions	18
Functions	19
Functions	20
Answering machine (only models 344622)	21
Cameras	25
CCTV	27
Memo	29
Text memo	31
Audio memo	32
Intercom	33
Activations	35
Quick actions	36
Settings	37
General settings	38
Time and date	38
Language	39
Information	39
Ringtones	40
Display	41
Clean monitor	41
Background	42
Calibration	42
Answering machine	43
Quick actions	45
Configuration	48
Services	49
Inductive loop	49
Door status	50
Office	51
Paging	52

Your Classe 300 Video Internal Unit, use it now!


Answer a call



1. Touch to answer the call, the LED comes on steady. To end the call touch the connection key again.
2. If necessary, during the call touch the screen to display the audio/video adjustment icons.



3. Touch the icons and to adjust the parameters.

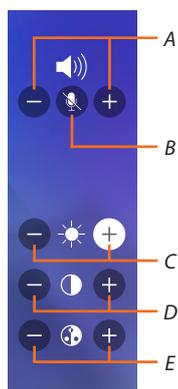

- A. Adjust the volume.
- B. Disable the microphone.
- C. Adjust the image brightness.
- D. Adjust the image contrast.
- E. Adjust the image colour.



- 4. Touch to open the Entrance Panel door lock.
The door lock key lights up briefly, to indicate that the door lock has been released.

Listen to the answering machine (only models 344622)

When there are one or more unread messages in the answering machine, the home page that opens when clicking the answering machine icon shows a numeric indication, and the answering machine LED flashes.



1. Touch to enter the answering machine and display the message.




2. Touch to open the message.

The message is played back automatically



3. Touch to pause or restart playback.

The message can be managed using the appropriate icons:

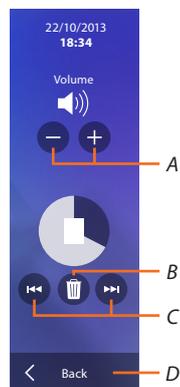

- A. Adjust the volume.
- B. Delete the message.
- C. Beginning and end of message.
- D. Return to the answering machine screen.

the message status indication automatically switches to “read” , and the numeric indication disappears from the home page



5. Touch to return to the home page.

Auto-switching on and camera scrolling

Any cameras installed in the system can be accessed using the dedicated section, or using the automatic switching on key.



1. Touch to display the cameras in your system.

The corresponding key comes on and the display shows the images recorded by the camera of the associated Entrance Panel.

For the camera adjustments see [Answer a call](#).



2. The connection key flashes; touch this key to enable audio communication.



3. Touch to display another camera (scrolling). When switching from one camera to the next, the key lights up.

To end camera display mode wait for the switching off time to elapse.



Note: switching from one camera to another is also possible without enabling the audio

Write or record a memo

It is possible to type a memo, or record a voice message for another user.

Typed memos may then be modified by the recipient, or the same can enter a new one.



1. Touch to write and/or record a memo.



2. Touch to write a memo.




3. Use the keypad to write.
4. Touch to save the text memo.




Warning: any unsaved memos will be lost.




5. Touch to record an audio memo.

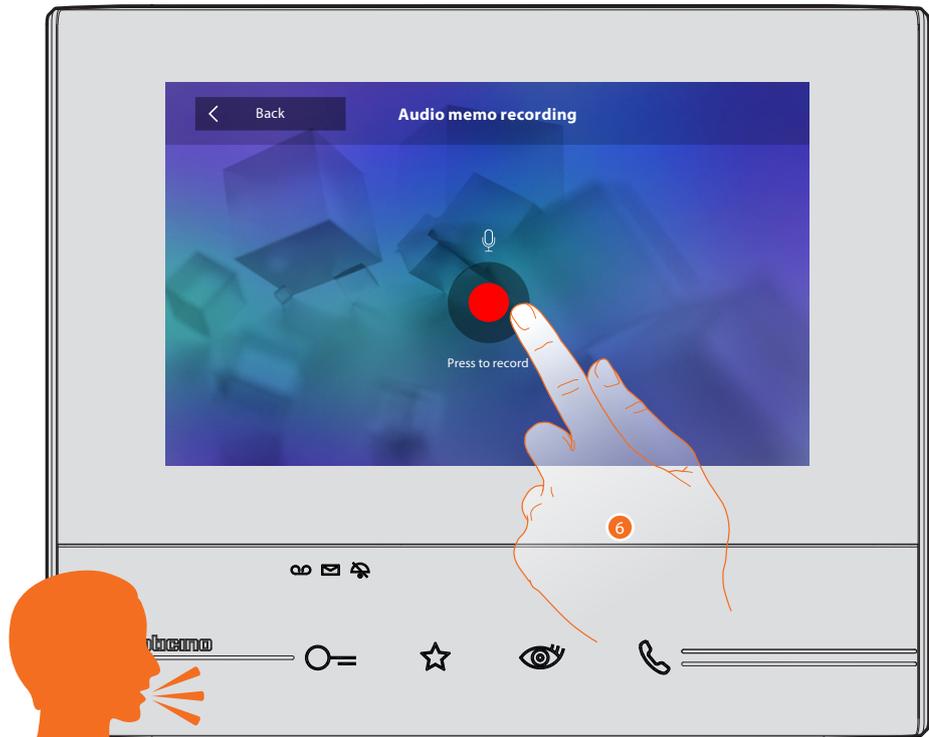

6. Press record and record the audio memo.

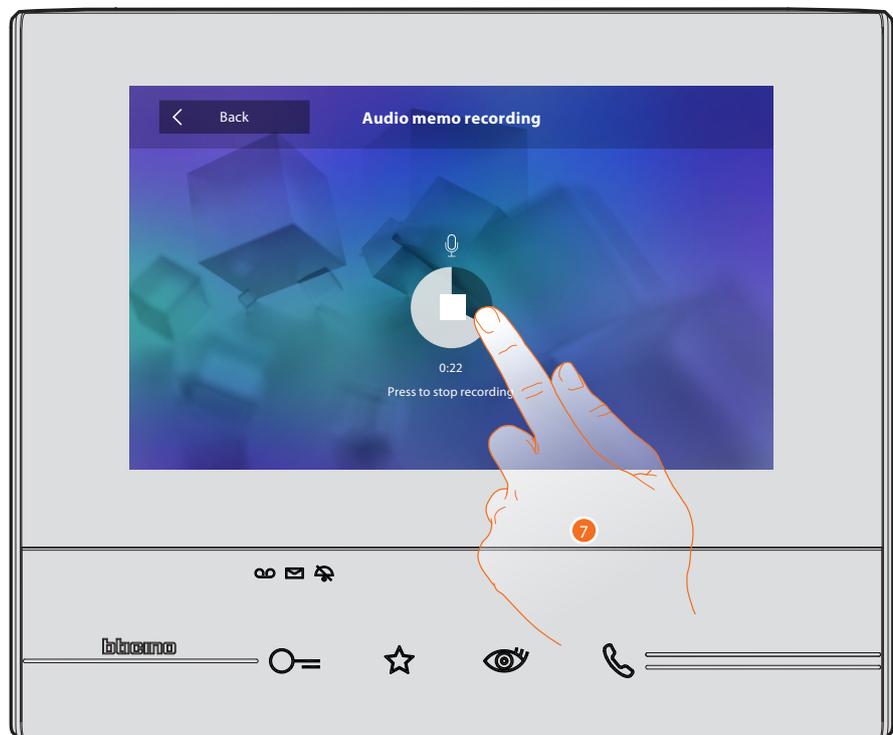

7. Touch to stop recording, or wait for the set time to elapse.

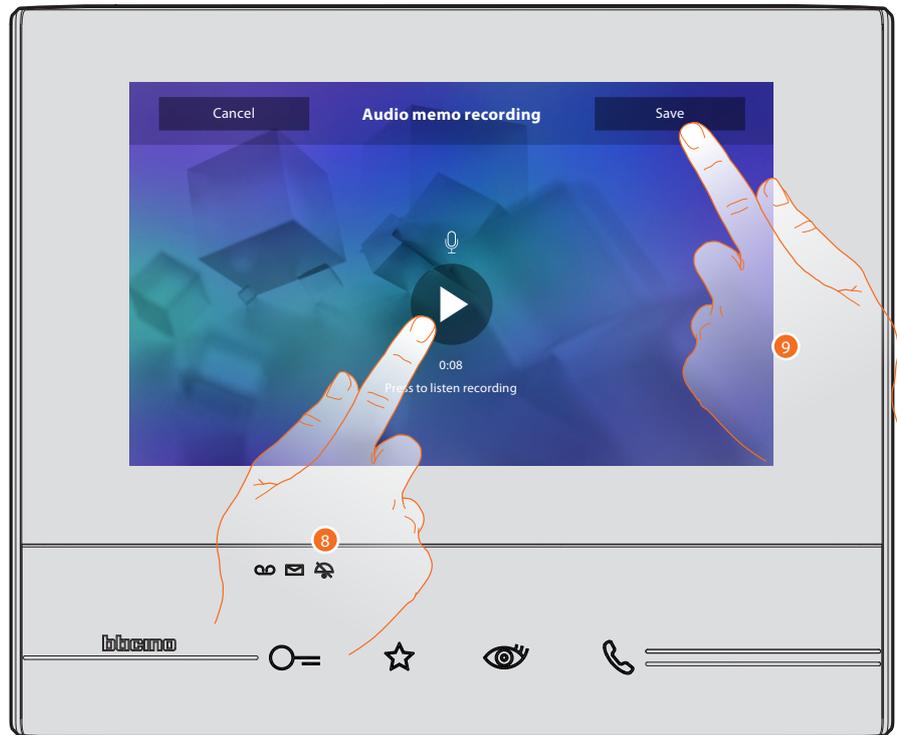

8. Touch to listen to the audio memo.

9. Touch to save the audio memo.




Warning: any unsaved memos will be lost.

Call another room or apartment (Intercom)

It is possible to communicate with another device installed in another room of the apartment or with a device of another apartment.




1. Touch to display the available intercoms.

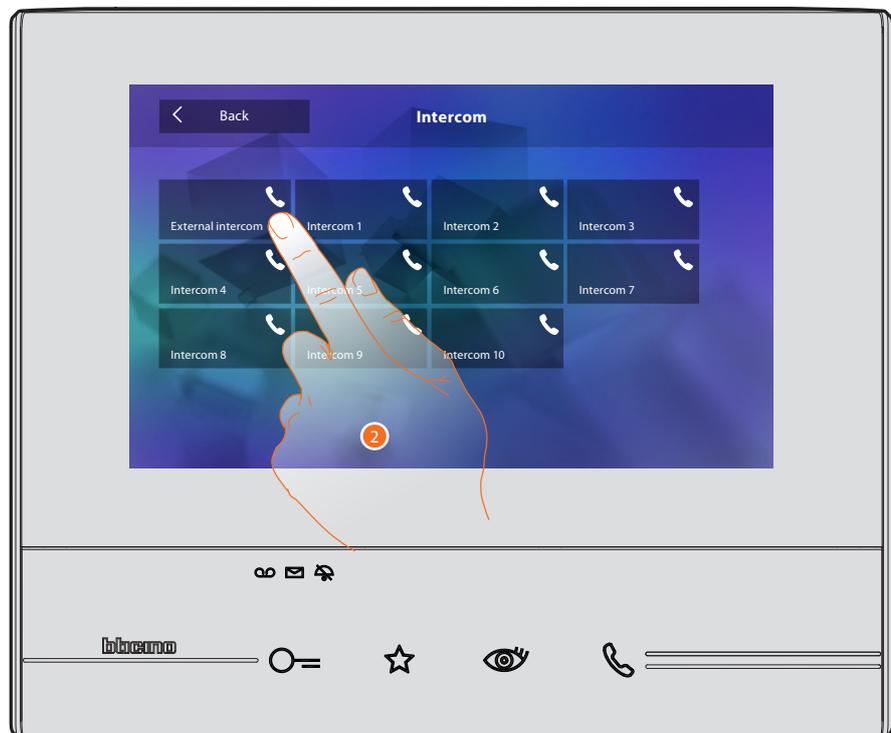

2. Touch to activate the communication with the desired intercom.



Key (A) lights up to indicate that the call is active.

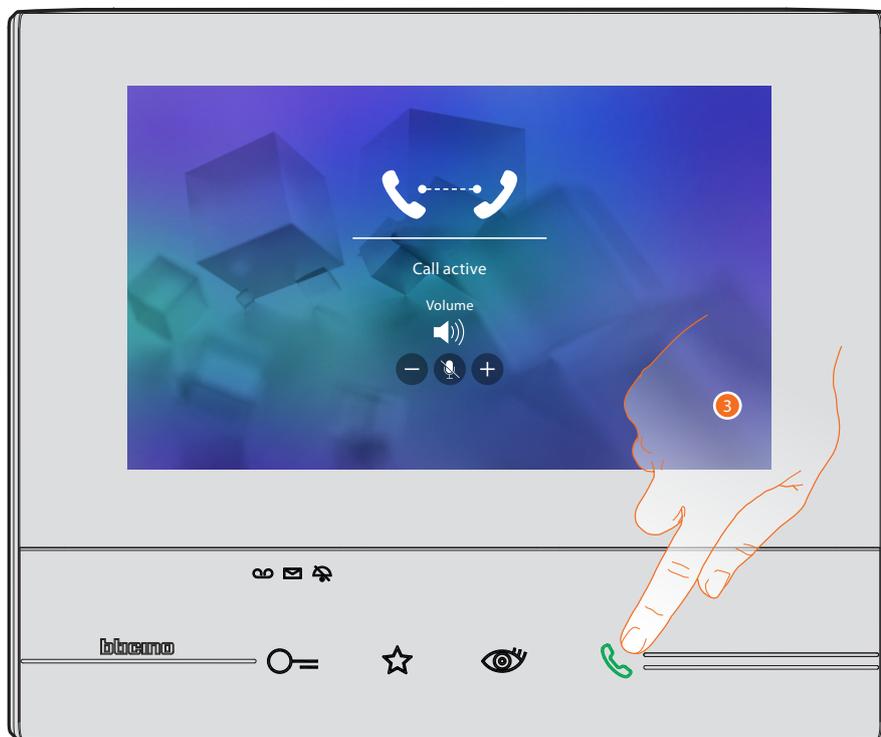

When the recipient answers the call, the audio adjustment icons appear; see [Answer a call](#).



Warning: When a call is received from the Entrance Panel while the internal unit is in "intercom" mode, the system follows the priority rules and ends the active call.

3. Touch to end the call.

General information




1. Home page
2. Tactile guides
3. Capacity keys for video door entry functions
4. Status LEDs

Function keys and status LEDs

Icon	Meaning
 Door lock key	During the connection with an Entrance Panel, use this key to release the door lock of that Entrance Panel, when idle, the same key releases the door lock of the associated Entrance Panel.
 Favorites key	Use this key to switch on the staircase light (basic configuration; for the other configurations refer to your installer).
 Auto-switching on/scrolling key	This key has two functions: It can be used to switch on the camera of the associated Entrance Panel, and to scroll through the connected cameras and/or entrance panels.
 Connection key	Use this key to answer a call: when a call is received, the key starts flashing, once the call is answered the key light is on steady. Touch again to end the call.
 Answering machine LED	When on steady, it indicates that the answering machine is active; when flashing, it means that there is an unread message in the answering machine.
 Memo LED	When flashing, it indicates that there are unread and/or unlistened memos.
 Bell exclusion LED	When on, it means that the call ringtone is disabled.

Home page

This page can show different contents based on the configuration mode (physical or advanced) and the device model. Below is the home page with all the functions enabled.

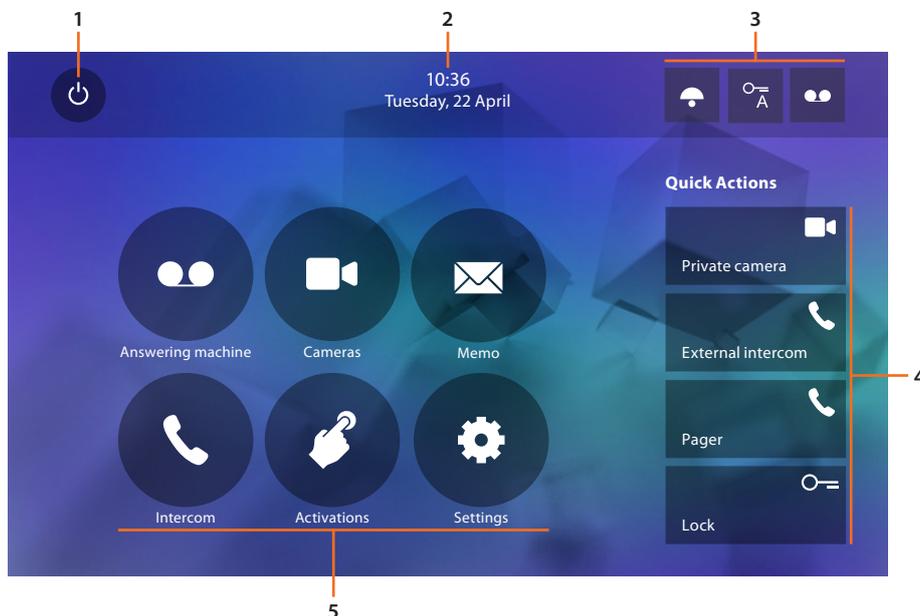


1. Screen off
2. Time and date
3. Enabling/disabling functions
4. Quick actions
5. Functions

Enabling functions

Icon		Meaning	
ON	OFF	Answering machine	Enable this function to record a call from the entrance panel (model 344622 only)
ON	OFF	Office	Enable this function to set the automatic opening of the door lock in case of call from the Entrance Panel
ON	OFF	Bell exclusion	Enable this function to mute the ringtone in case of call

Quick actions

 Touch this icon to directly enable the indicated function (set in [Settings/Quick Actions](#)).



1. Description
2. Type of function

Functions

Touch the icons shown below to display the screens for the selected functions. The presence of these icons depends on the configuration of the system.



Warning: the Cameras, Intercom, and Activations functions are only available if the device has not been configured physically. To enable them contact the your installer.


Icon		Meaning
	Answering machine	Touch to access the screen where it is possible to display the video door entry system messages recorded by the answering machine.
	Cameras	Touch to access the screen for the activation of the cameras of the system, and display the images recorded by them.
	Memo	Touch to access the screen used to write or record a memos, or display and listen to any memos present.
	Intercom	Touch to access the screen used communicated with other audio/video internal units installed in your apartment or in other apartments.
	Activations	Touch to access the screen where it is possible to enable certain actuators (e.g. door locks, garden light, etc.).
	Settings	Touch to access the screen where it is possible to customise the functions, to make the most of your device.

Functions

The screens of the main functions can be directly accessed from the home page by touching the corresponding icons.



1. Touch the icon for the relevant function, choosing among.

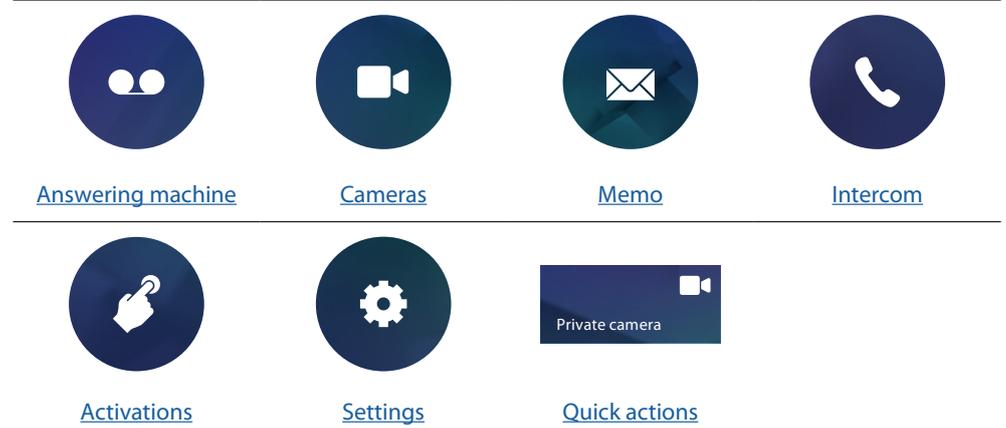

Answering machine (only models 344622)

In this section it is possible to display the audio/video messages recorded from the Entrance Panel in your absence. For this to work, it is necessary to activate the function by pressing the relevant icon (A).



When a message has been recorded in the answering machine, LED (B) flashes, and the function icon shows a number indicating the new or unread messages (C).

1. Touch to enter the answering machine.




- A. Date/time of recording.
- B. Preview.
- C. Message status indicator:
 - unread message;
 - read message
- 2. Touch to open the message.

The message is played back automatically



3. Touch to pause playback.

The message can be managed using the appropriate icons:

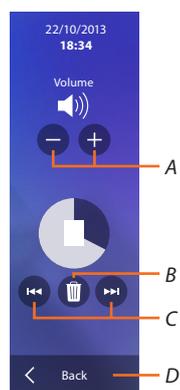

- A. Adjust the volume.
 - B. Delete the message.
 - C. Beginning and end of message.
 - D. Return to the answering machine screen.
4. Touch to close the display.

the message status indication automatically switches to "read" , and the numeric indication disappears from the home page



5. Touch to return to the home page.

Cameras

This section can be used to monitor your home by enabling one of the cameras inside the apartment, the common areas (e.g. garages, garden), and at the entrance panels. After enabling a camera, it is possible to “scroll” (display in sequence) the other cameras.



1. Touch to display the cameras in your system.



2. Touch to activate the desired camera.

The display shows the images recorded by the active camera.
For the camera adjustments see [Answer a call](#).




3. Touch to display another camera (scrolling). When switching from one camera to the next, the key lights up.
4. If the camera belongs to an Entrance Panel, the key flashes. Touch it to activate audio communication.

To end camera display mode wait for the switching off time to elapse.

CCTV

This section can be used to monitor your home by enabling one of the video surveillance system cameras inside the apartment or the common areas (e.g. garages, garden).

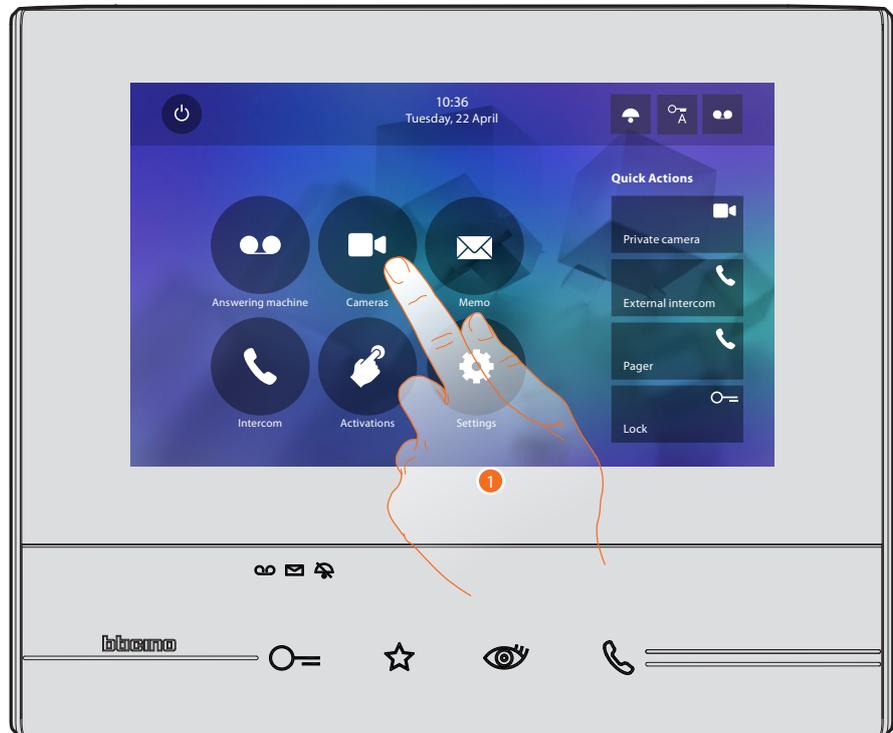


1. Touch to display the cameras in your system.



2. Touch to activate the desired camera.

The display shows the images recorded by the active camera.
For the camera adjustments see [Answer a call](#).

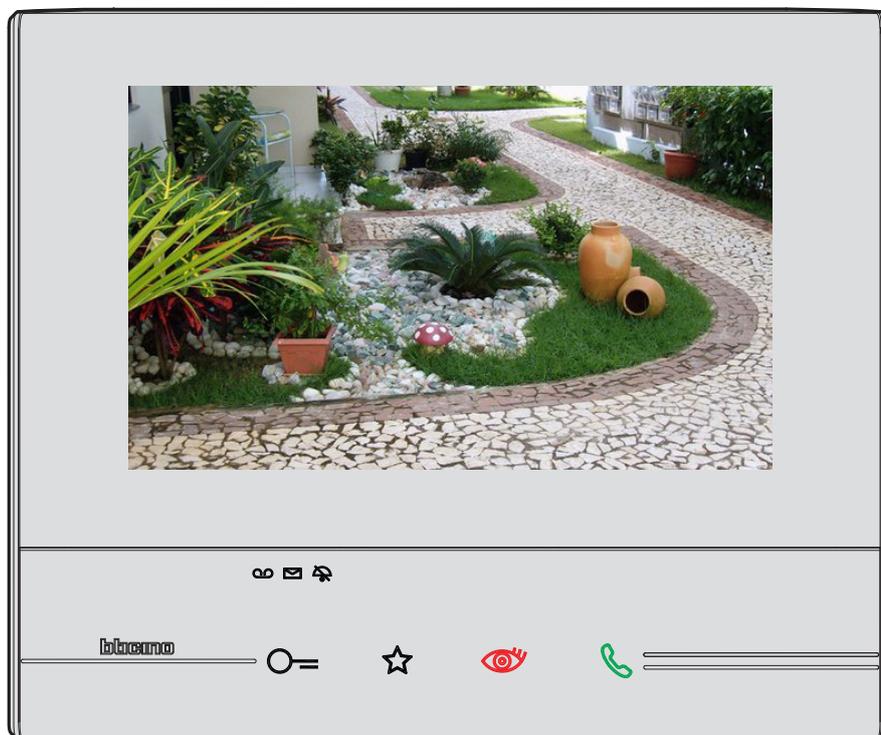


The image is displayed for three minutes. The camera cycling function is not included



*For the camera cycling or multi-vision function, a device performing these functions must be installed (e.g. Digital Video Recorder).
For more information contact your installer.*


Memo

In this section it is possible to create memos, or display any memos left by other users, or by the switchboard. There are two types of memos: written memos and voice messages.

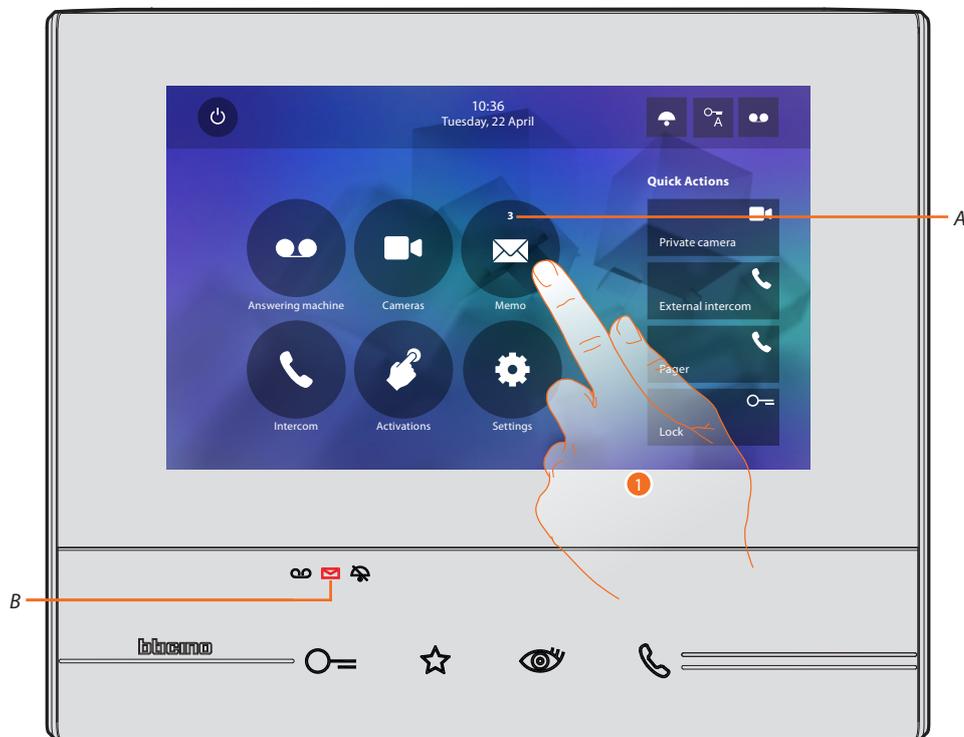

When a memo has been recorded in the answering machine, LED (B) flashes, and the function icon shows a number indicating the new or unread messages (A).

1. Touch to access the memos.

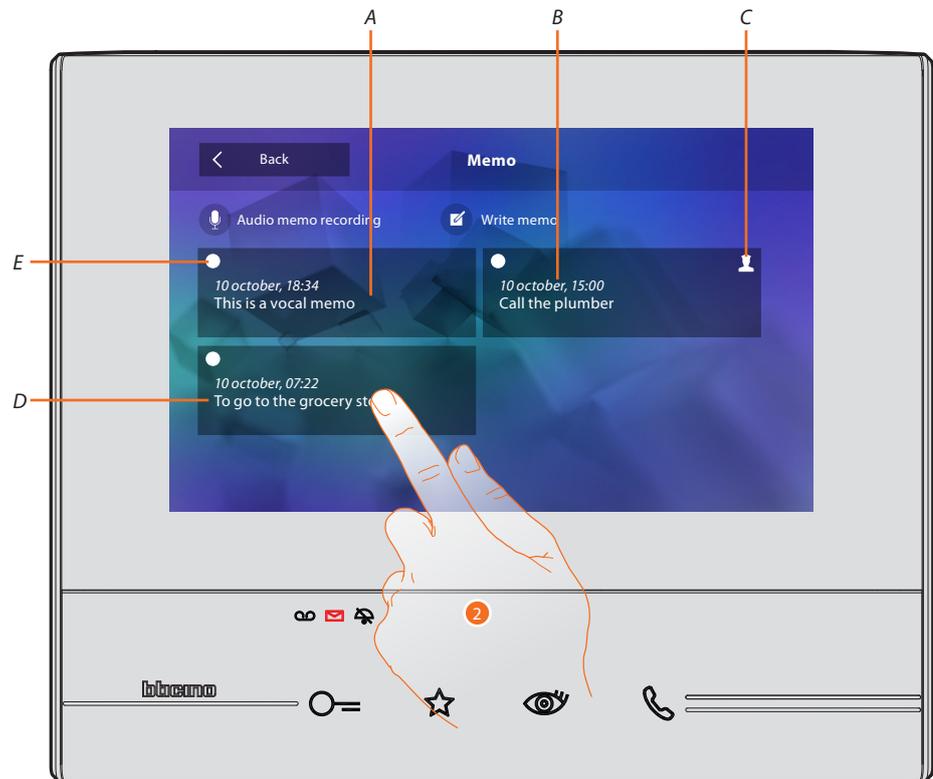

- A. Voice memo indication.
- B. Date/time of recording.
- C. Memo from the switchboard.
- D. Written memo preview.
- E. Memo status indicator:
 - unread memo;
 - read memo
- 2. Touch to open the memo.

Text memo




This screen can be used to display (C), modify (A) or delete (B) the memo text.
 3. Touch to modify the memo.




4. Use the keypad to modify the memo.
 5. Touch to save the modification.

Audio memo

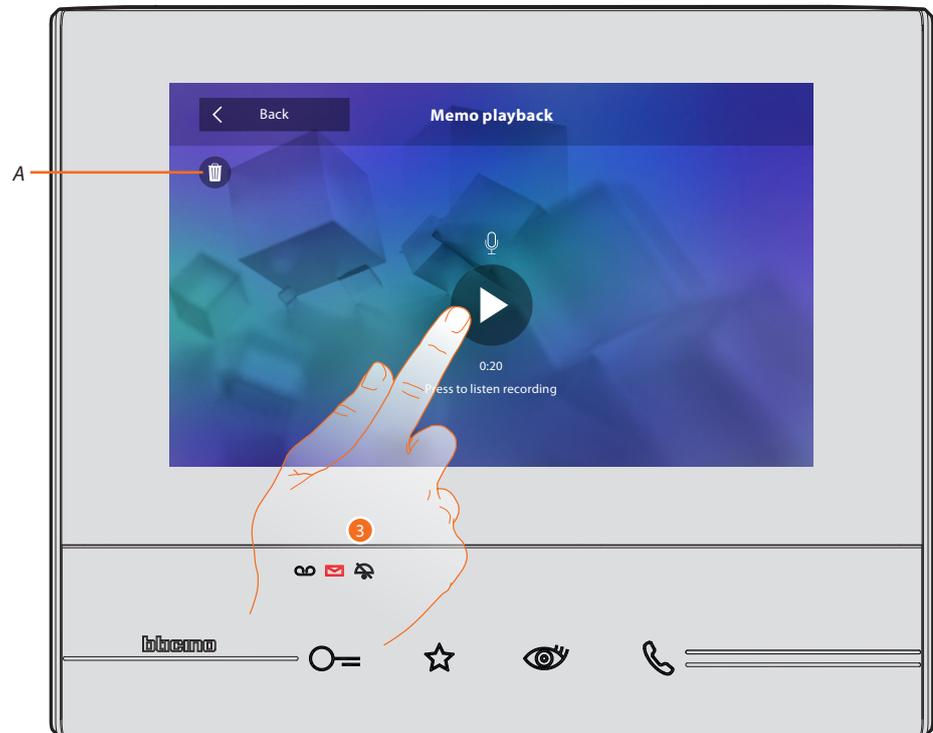

This screen can be used to listen to the audio memo, or to delete it (A).

3. Touch to listen to the recording.

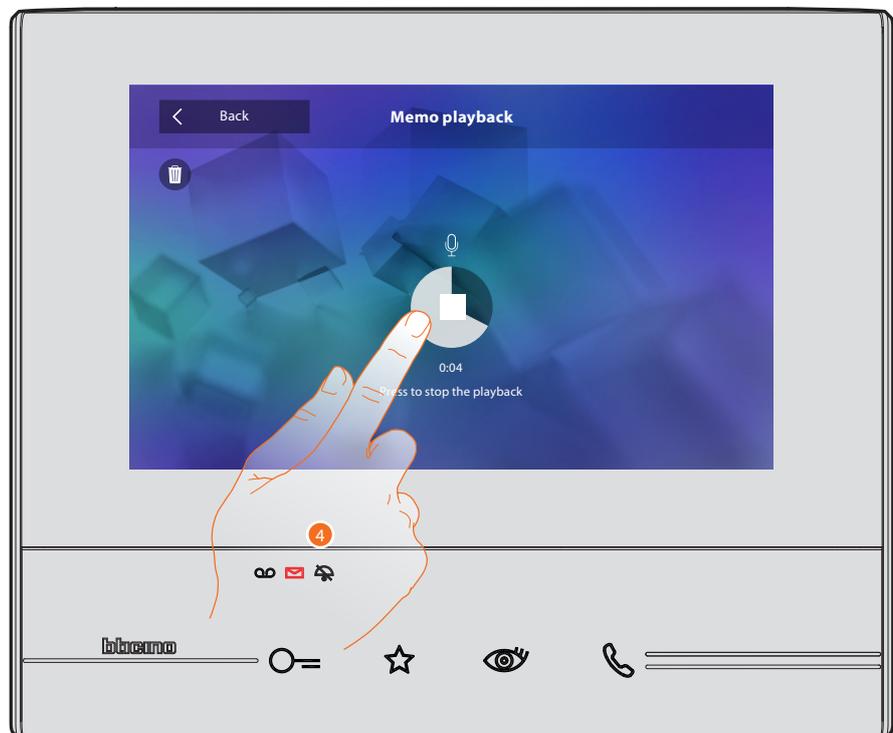

4. Touch to stop playback.

Intercom

This section can be used to communicate with other video/audio internal units installed in your home, or in other apartments.




1. Touch to display the available intercoms.



2. Touch to activate the communication with the desired intercom.



Key (A) lights up to indicate that the call is active.

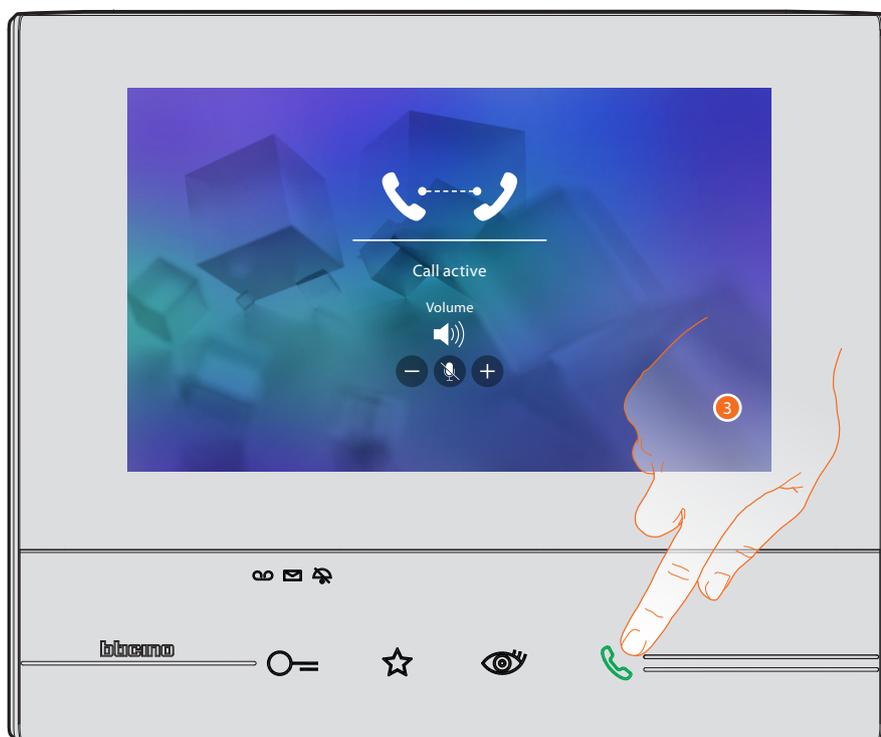

When the recipient answers the call, the audio adjustment icons appear; see [Answer a call](#).



Warning: When a call is received from the Entrance Panel while the internal unit is in "intercom" mode, the system follows the priority rules and ends the active call.

Note: only the devices supplied with additional power supply can display the caller address before the audio connection.

3. Touch to end the call.

Activations

This section can be used to enable certain actuators (e.g. door locks, garden light, etc.).



1. Touch to display the available activations.



2. Touch to activate the communication with the desired intercom.
Key (A) lights up to indicate that the activation has been successful.

Quick actions

On the right of the home page are the quick actions, if previously enabled in the [Settings/Quick Action](#) section, or if physically configured (maximum 4).

Touch these icons to directly enable the function without opening the specific screen.



1. Touch to directly enable the function (e.g. camera).




Settings


The home page always contains the “Settings” icon.

Touching it will give access to a wide range of customisations that will enable you to make the most of your Classe 300.

Further settings are also available in the Configuration section (password protected). For this section refer to your installer.

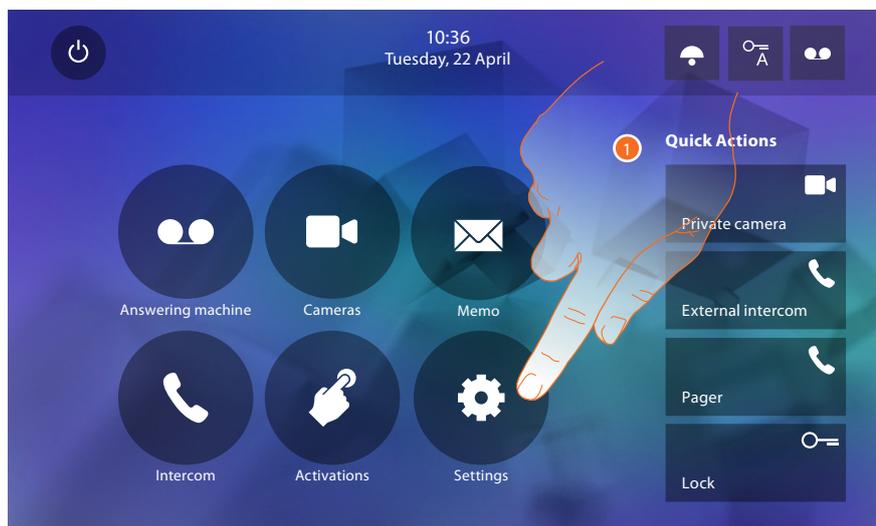

1. Touch to enter the settings section.

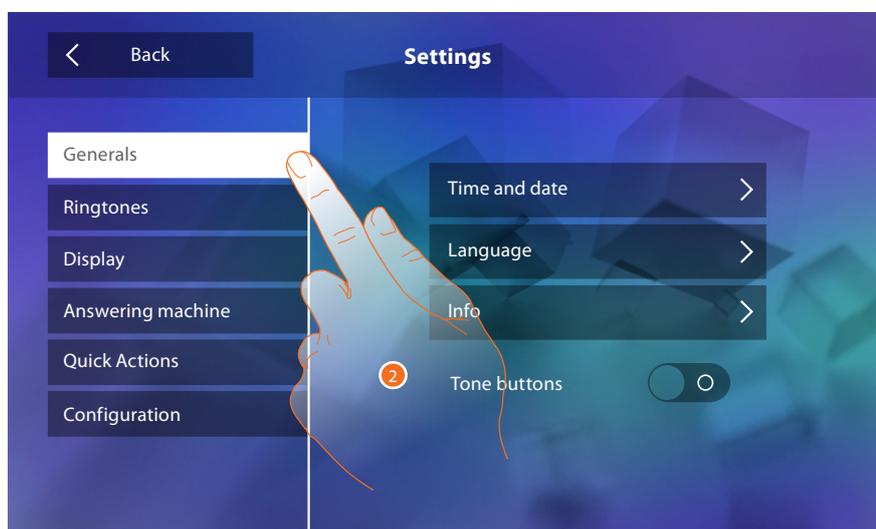


2. Touch the icon for the desired customisation, choosing among:

Generals >	Time and date - Language - Information - Key tone
Ringtones >	Volume - Intercom ringtone - Entrance Panel Ringtone - Other ringtones...
Display >	Clean monitor - Background - Calibration
Answering machine >	Recording Mode - Welcome Message - Record Message...
Quick Actions >	Add quick action
Configuration >	WARNING Access to the "Configuration" section is reserved for the installer; wrong settings may compromise the operation of the device

General settings

This section contains the general settings and device information.

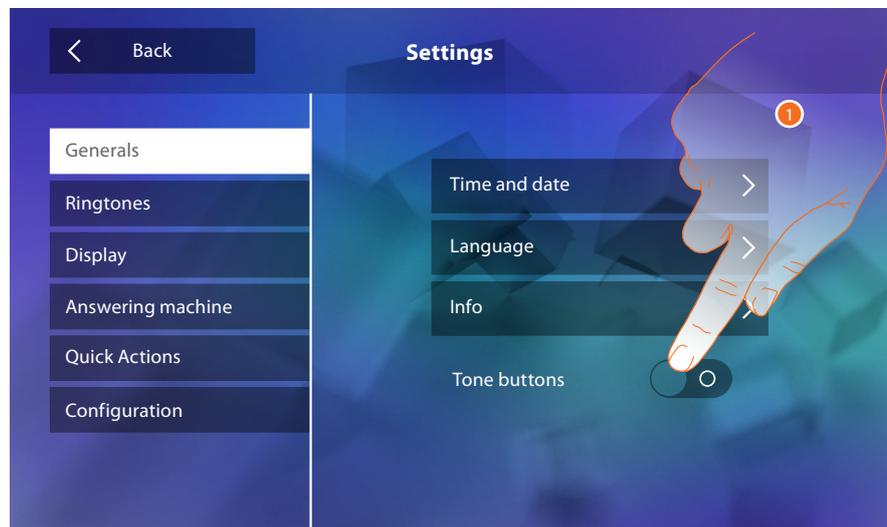

1. Enable/disable the sound when a key is pressed.

Time and date

Set the current time and date.



1. Touch the icon for the parameter to set; the icons to increase or decrease the value appear.
2. Touch to set it.
3. Touch to go back and save the settings.

Language


Set the device language.



1. Touch the icon for the desired language.

Information

It displays information concerning the configuration of the device.

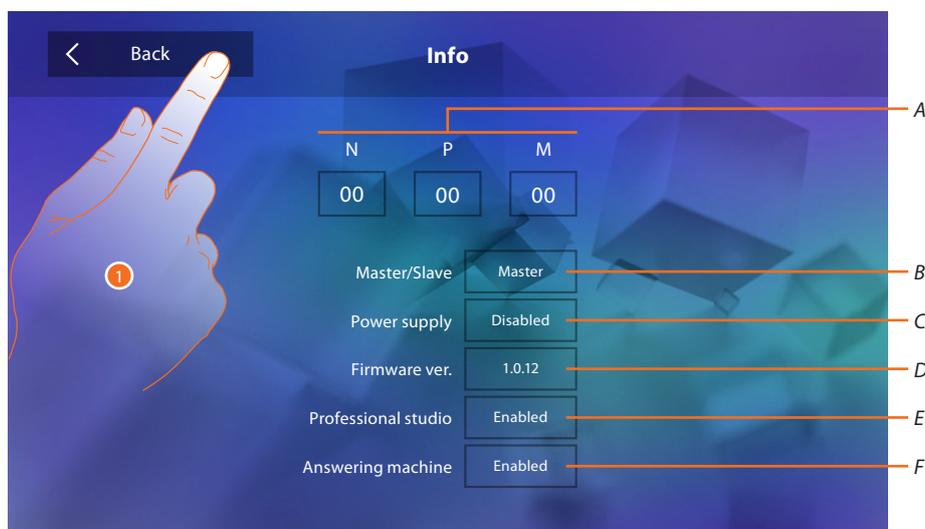


Display:

- The configuration parameters.
- If the device has been set as apartment master or slave.
- If an additional power supply is present.
- The firmware version of the device.
- If the [Office](#) function is active.
- If the [Answering machine](#) function is active.

1. Touch to go back and save the settings.

Ringtones

This section can be used to associate specific ringtones to certain events, and to adjust their volume.

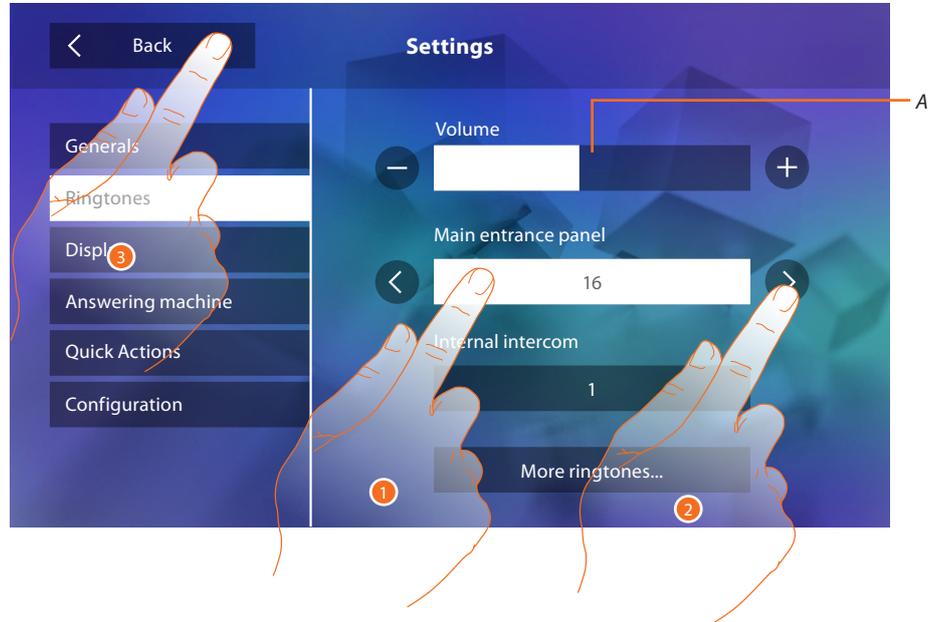

A. *Adjust the ringtone volume.*

1. Touch the event to which to associate a specific ringtone; the selection icons appear.
2. Scroll through the available ringtones (16); they will be played back as you scroll through them.
3. Touch to go back and save the settings.

Events to which it is possible to associate ringtones:

Main Entrance Panel: call from the main Entrance Panel (S0)

Internal intercom: call from an intercom in your apartment.

Other ringtones...

S1, 2, 3 Entrance Panel: call from the SECONDARY Entrance Panel (S1; S2; S3)


External intercom: call from an intercom of another apartment.

Call to the floor: call from the pushbutton outside your entrance door.

Notifications: memo from the switchboard.


Display

This section is used to calibrate and clean the monitor, and to change the background image.

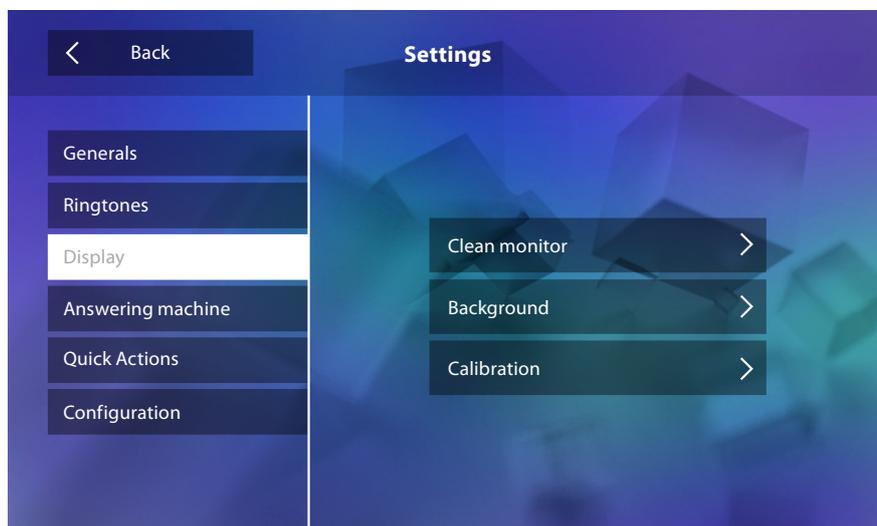

Clean monitor

It's used to disable the display and the keys for cleaning purposes, without the risk of sending unwanted commands.

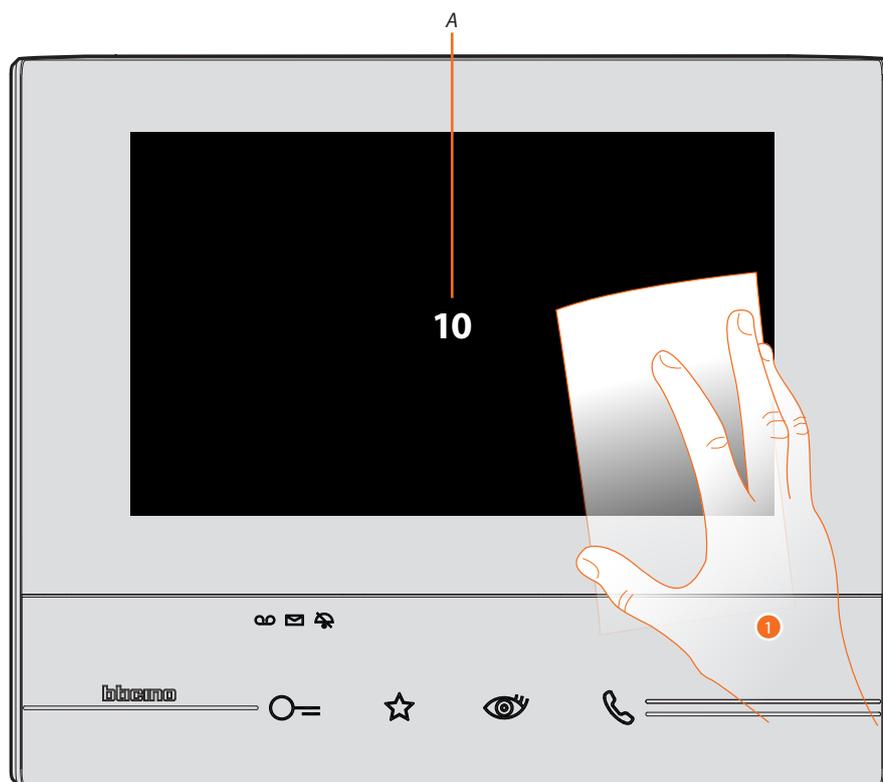

A. After touching the corresponding icon, the display remains in stand-by for 10 seconds.


1. During this period, it is possible to clean the monitor and the keys.



Caution: do not clean with solvents, thinners etc. or abrasive products. Only use a soft cloth.

Background


It gives the possibility to change the background image of the device.

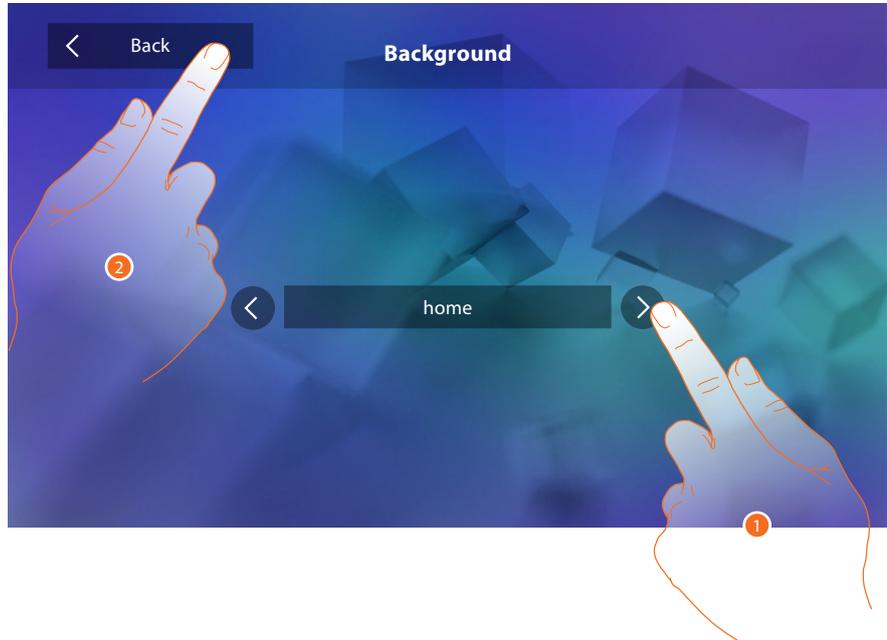

1. Scroll through the available images to get a background preview.
2. Touch to go back and save the settings.

Calibration


It can be used to adjust the touch pressure for the display.

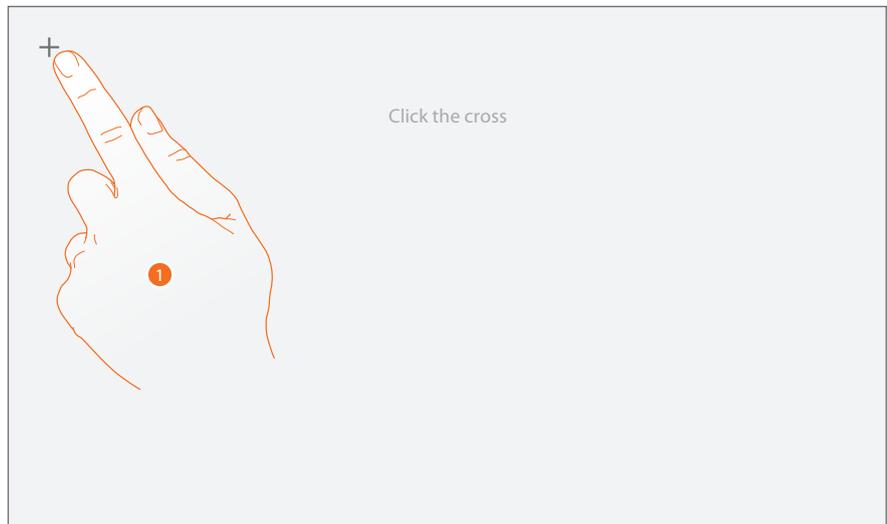

1. Touch the "cross" symbol on the display as it moves to all 5 positions. At the end, the **OK** icons appears at the corners of the display. Touch it to complete the calibration procedure.

Answering machine

This page can be used to set the quality of the videos recorded by the answering machine, or to record, enable, disable the welcome message.

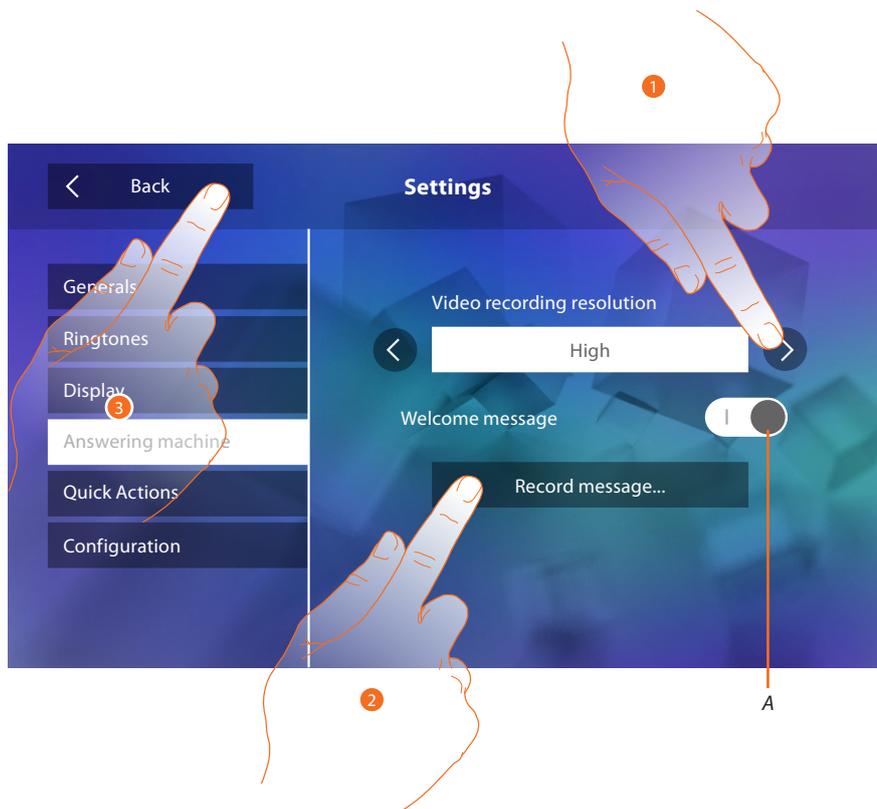


A. Enable/disable the welcome message.


1. Set if video messages must be recorded in high resolution (maximum 25 x 15 sec. messages), or in low resolution (maximum 150 x 15 sec. messages).
2. Touch to record a welcome message.
3. Touch to go back and save the settings.




Warning: the most recent message overwrites the oldest one.

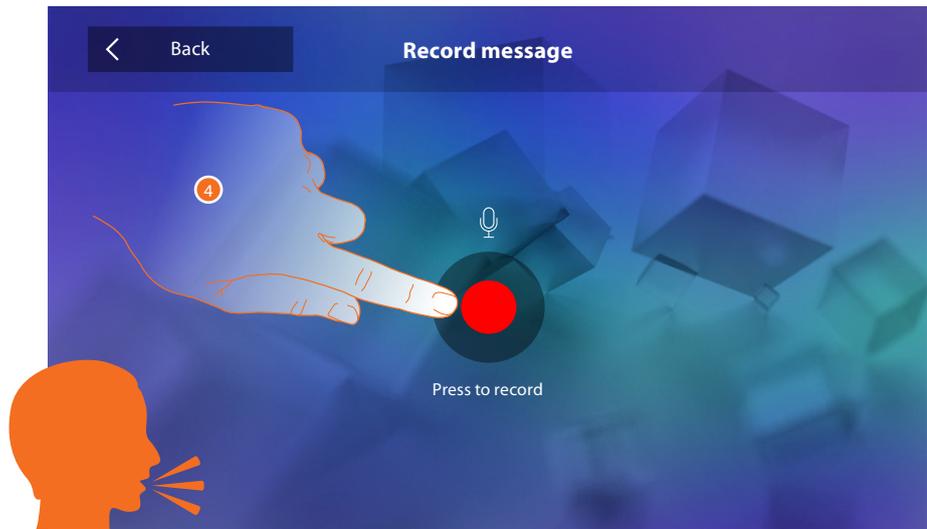

4. Touch to start recording, and then record the message.

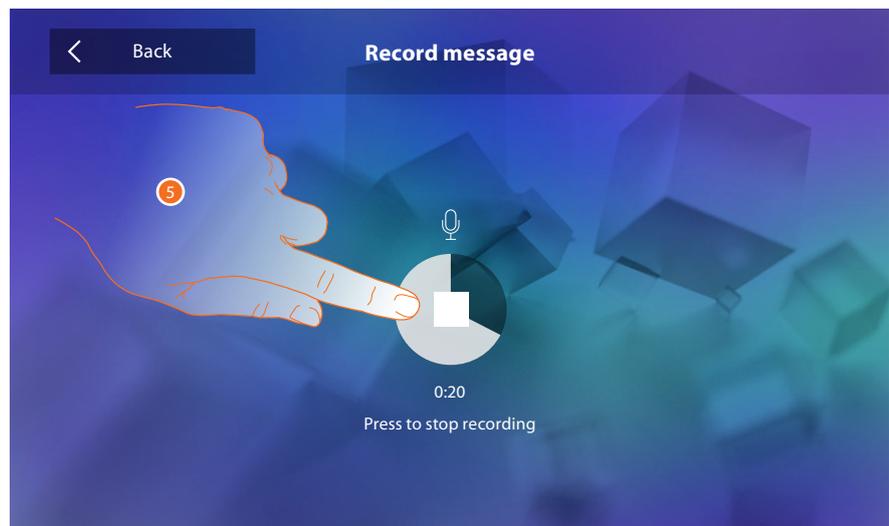

5. Touch to end the recording.

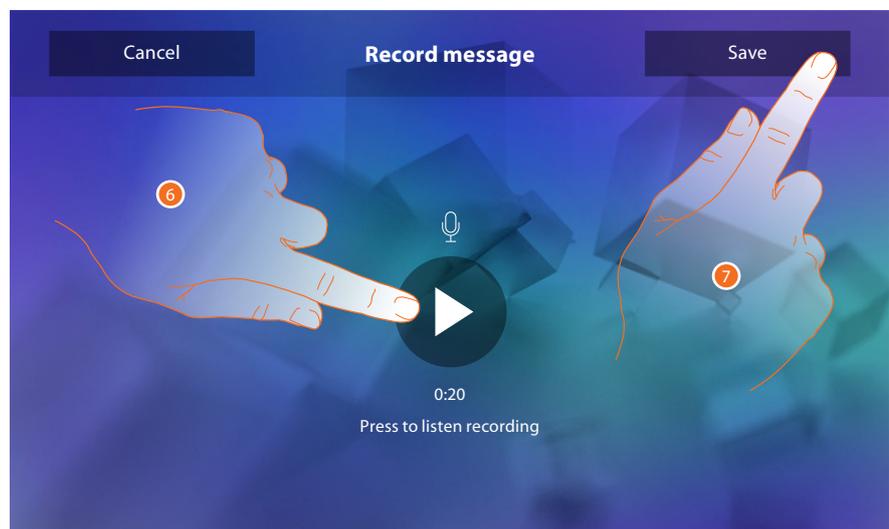


6. Touch to play the message back.


7. Touch to save it.

Quick actions


In this section it is possible to select the 4 quick actions that will appear on the home page and customise their names.

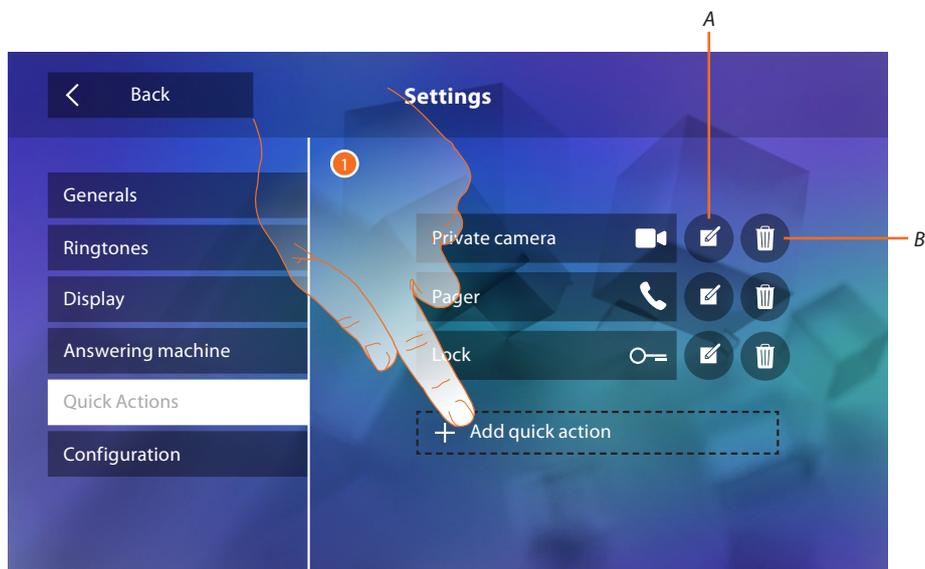


1. Touch to add a quick action.
- A. Change the name of the quick action.
- B. Remove the quick action from the home page.

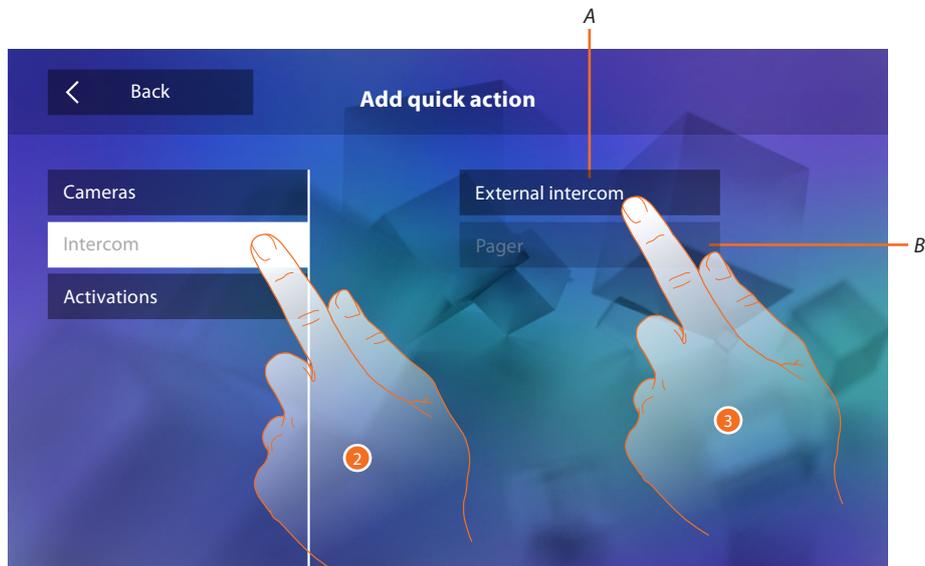


2. Select the type of function for which you want to add a quick action.
3. Select the quick action among those available.
 - A. Available quick action.
 - B. Quick action already included in the home page.

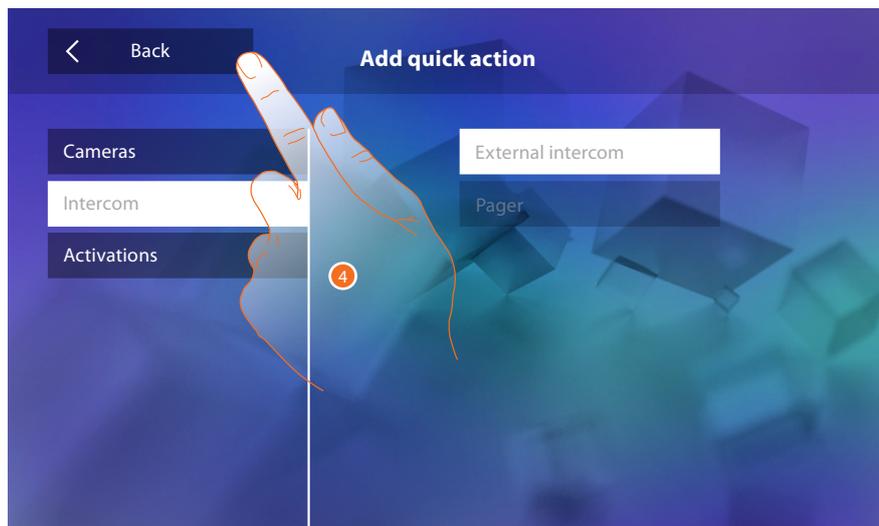

4. Touch to return to the quick action screen and save the settings.

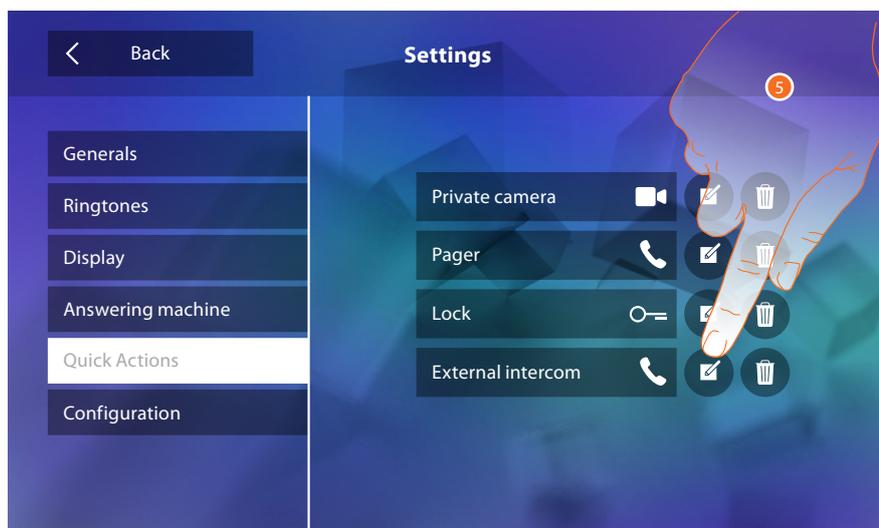

5. Touch to modify the name.

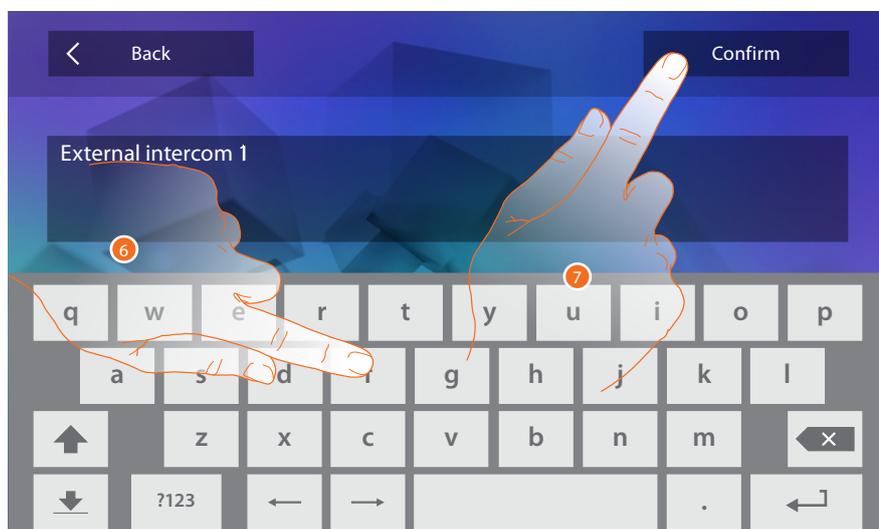


6. Enter the new name.


7. Touch to save it.



Warning: if your device has been configured physically, it is only possible to change the name, remove or use the quick actions already preconfigured by the installer.

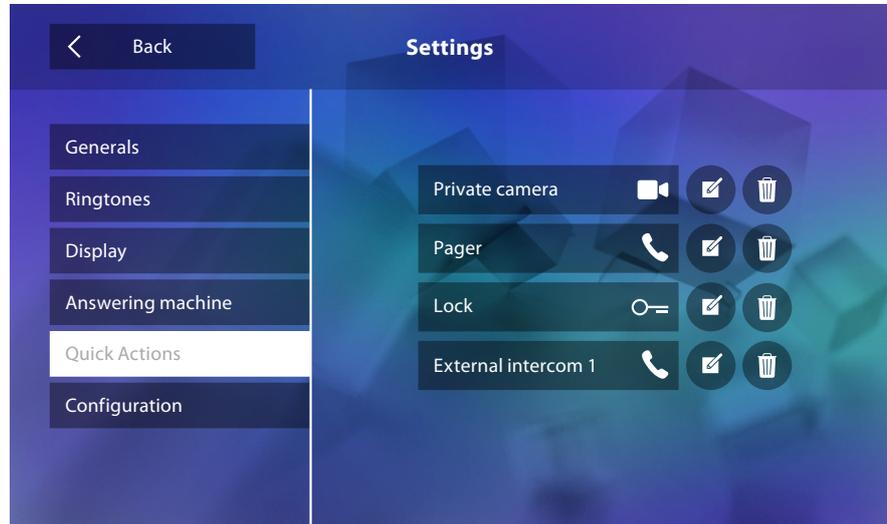


Configuration

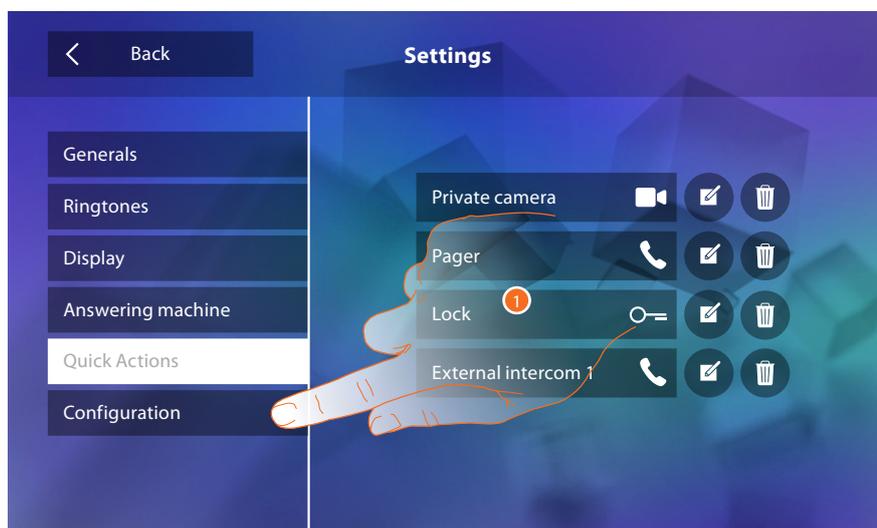

1. Touch to enter the configuration.

This section, password protected, can be used to performed an advanced configuration of the device.

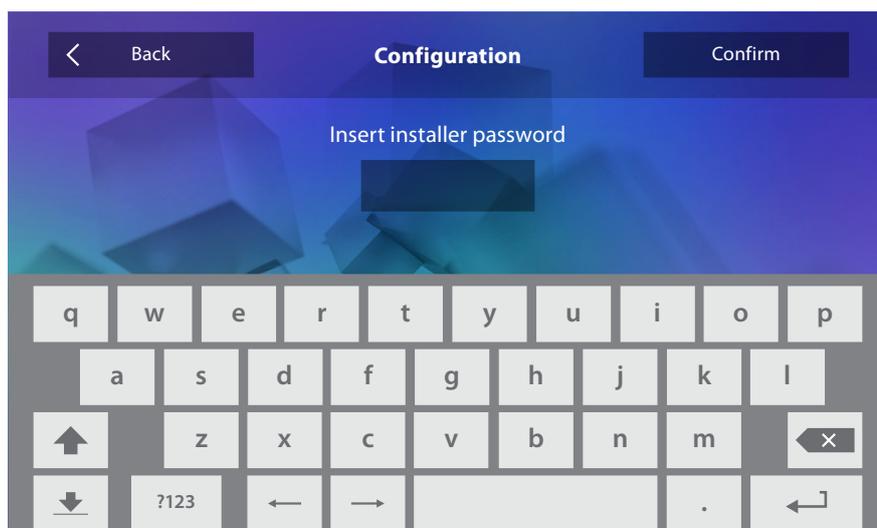

Warning: access to the "Configuration" section is reserved for the installer; wrong settings may compromise the operation of the device

Services

Below are the services available using your Classe 300:

[Inductive loop](#)

[Door status](#)

[Office](#)


[Paging](#)

Inductive loop

This function enables the device to be used by people wearing hearing aids.



To use this function, switch the acoustic device to the T position.

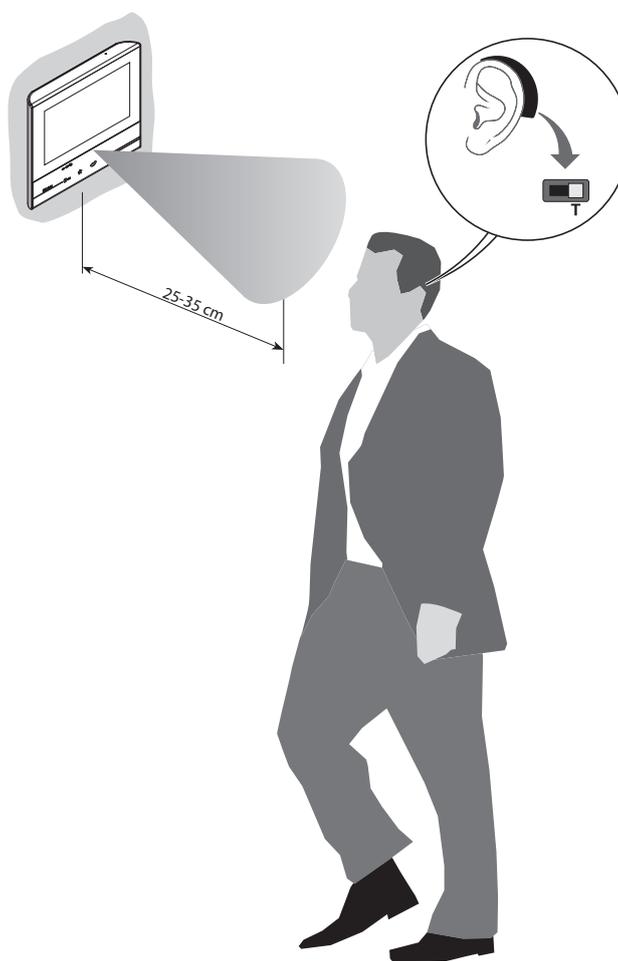

To ensure correct magnetic coupling between the IU and the acoustic device, we recommend a position in front of the device, at a distance of 25-35cm. It is reminded that the presence of metal and background noise generated by electric/electronic devices (e.g. computer) may compromise the performance and the quality of the coupling device.

Door status

This function indicates the status of the door lock only for systems preset with appropriate actuator.

If open the "door lock LED" flashes, and if closed, the LED stays off.

The function cannot be activated together with the Office function.



A. LED flashing = door lock open.

Office

This function gives the possibility of setting the automatic opening of the door lock in case of call from the Entrance Panel.

Activation is possible after enabling by the installer in the configuration section, but is not possible when using the "Door Status" function.



- A. LED flashing = active function.
- 1. Touch to activate the function.

Paging


This function can be used to send voice messages using the microphone of the device through the speakers of the Sound system.



1. Touch to enter the Intercom section.



2. Touch to activate the function.

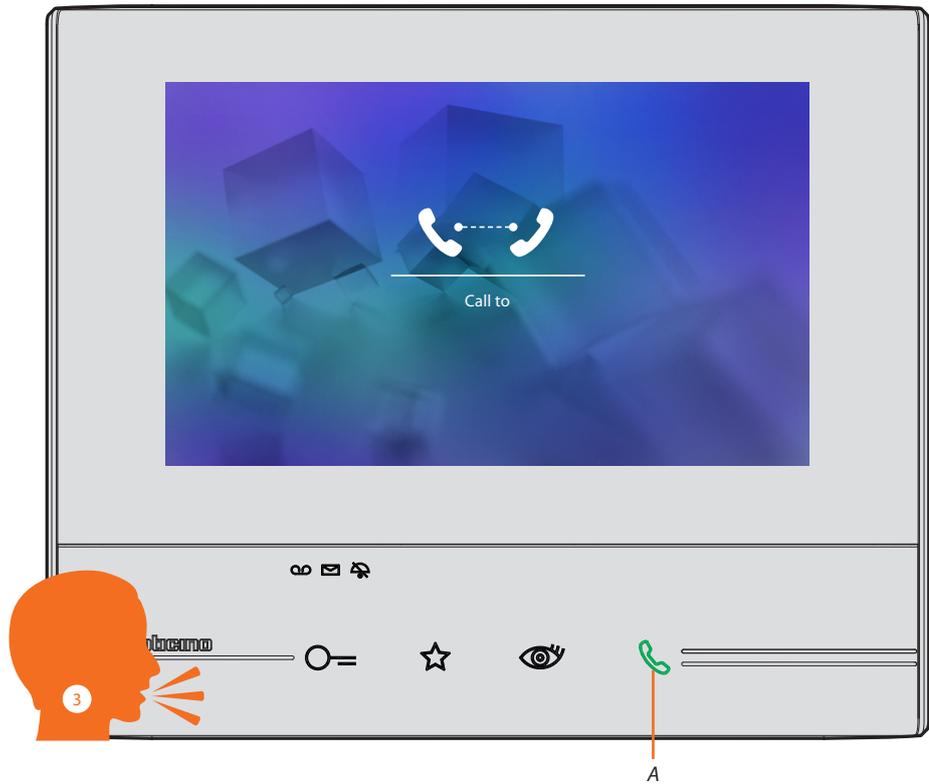

- A. Active connection.
- 3. Play the message.



- 4. Touch to close the connection.

